#### EFALOCK MICRO SCALE

Thank you so much for purchasing a product from EFALOCK Professional. To ensure proper and safe use, please read the instruction manual and the safety instructions carefully and always take into account. We hope you enjoy using your new EFALOCK MICRO SCALE and that you find it pleasant to work with.



- A Weighing platform
- B Weighing screen LCD
- C ON-/OFF-button
- D Tare button
- E unit selector button
- F Hold button

#### SAFETY ADVICE AND WARNINGS

- Read these instructions carefully before switching on the appliance and keep them for future referen- ce. Failure to follow and observe these instructions may result in an accident.

- Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

- This appliance can be used by people unused to its handling, disabled people or children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

- Cleaning and user maintenance shall not be made by children unless they are supervised.

- Place the appliance on a horizontal, hard, rigid, flat, stable surface that is free from vibrations. Avoiding any contact of the weighing area with walls or other objects not to be weighed. Otherwise, it will not show the right weight.

#### USE AND CARE:

- Do not overload the appliance's weight capacity.

- Remove the batteries from the appliance if you are not going to use it for some time.

- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

#### **ASSEMBLING THE BATTERY/S**

- Caution: During the handling of batteries, do not touch both poles at the same time, as this will provoke the partial discharge of the stocked energy therefore affecting longevity.

- Remove the cover of the battery compartment.

- Check that the plastic covering that protects the battery has been removed (some batteries are sold with a protective covering).

- Put the battery in its compartment, respecting the polarity
- Close the cover of the battery compartment.

- It is essential that the batteries should always be the same kind and the same charge. Never mix alkaline batteries with normal one (Carbon-Zinc) and/or rechargeable ones.

- NB: When changing the batteries, the configura- tion of the appliance will be removed, and you will need to reset the parameters of the appliance.

#### **INSTRUCTIONS FOR USE**

#### **BEFORE USE:**

- Prepare the appliance according to the function you wish to use.

#### USE:

- Start appliance pressing the on/off button.

- Place items to be weighed in the middle of the appliance platform, avoiding sudden movements or contact with other objects until the appliance displays the amount of weight.

- To avoid inaccurate results caused by electromag- netic interference between electrical and electronic equipments, do not use this appliance near to a cell phone or microwave oven.

#### WEIGHT UNIT SELECTOR G/OZ:

- The appliance has a selector of weighing units, put the selector in the position according to those units you want to work with. To do so, press the "MODE" button, the measuring unit selected will then be shown on screen one after the other.

#### TARE FUNCTION:

- The appliance includes a tare function. This function is useful for weighing different items one after the other, without having to remove everything from the weighing platform each time.

#### STAND-BY:

- To save energy, the appliance goes into stand-by after 90 seconds, if the user has not used the appliance during this time.

- To return to normal functioning, press the ON-/OFF-button.

#### ONCE YOU HAVE FINISHED USING THE APPLIANCE:

- Turn the appliance off using the ON-/OFF button for 3 seconds.
- Clean the appliance

#### **HOLD-FUNCTION:**

Lock the weight during weighing , press "HOLD" to lock the LCD number , the LCD will show "HOLD" ; Press "HOLD" again to release the number.

#### SPECIAL MESSAGES:

The following messages can appear on the screen:

- O\_Ld: means that the appliance's capacity has been exceeded.

- When numbers on the display lose intensity, the batteries need to be replaced.

#### CLEANING

- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.

- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.

- Do not submerge the appliance in water or any other liquid, or place it under a running tap.

#### SUPPLIES

- Only the following type of supplies must be used with the appliance. - Batteries: AAA

- Batteries: AAA

These supplies are available in specialist shops.

#### ANOMALIES AND REPAIR

- Take the appliance to an authorised technical support service if problems arise. Do not try to dismantle or repair without assistance, as this may be dangerous.

#### ECOLOGY AND RECYCLABILITY OF THE PRODUCT

- The materials of which the packaging of this appliance consists are included in a collection, classification and recycling system. Should you wish to dispose of them, use the appropriate public recycling bins for each type of material. The product does not contain concentrations of substances that could be considered harmful to the environment. This symbol means that in case you wish to dispose of the product once its working life das ended, take it to an authorized waste agent for the selective collection of waste electrical and electronic equipment (WEEE).

This appliance complies with Directive 2014/30/EU on Electromagnetic Compatibility and Directive 2011/65/EU on the restrictions of the use of certain hazardous substances in electrical and electronic equipment.

#### WARRANTY

EFALOCK grants the statutory warranty on all product parts that are not subject to wear with its small electrical appliances. The rights from this warranty apply alongside the statutory and/or contractual warranty rights which the purchaser is entitled to exercise against the vendor. The warranty period commences with the handover of the appliance. The time of the handover must be demonstrated by presentation of the receipt, invoice, delivery note or similar. The warranty period depends on the term of the statutory period of limitation defined for warranties in the national law of the country in which the appliance was purchased but isno longer than two years. Defects that occur during the warranty period and of which we are notified in writing within three weeks of their occurrence will be remedied without cost on condition of verification of proper use. Repairs must be carried out at our factory or at a sales point that has been authorised by us. The customer is not entitled to make any further claims on the basis of this warranty. Defects caused by the following are excluded from the warranty:

- Incorrect use or insufficient care

– Excessive use, incorrect treatment, maintenance or damage through external forces

- Non-observance of the instructions of use

– Repair or attempt at repair not carried out by EFALOCK or an authorised service partner

Replaced parts will become our property when repairs are carried out within the scope of the warranty. EFALOCK will be entitled to eliminate the defect by supplying an appliance of the same type. Further customer claims arising out of this warranty, particularly for the reimbursement of expenses, price reduction, compensation for damages or the right to withdraw from the contract, do not exist. Statutory or other contractual claims made as a result of material defects will remain unaffected. The warranty period will not be extended as a result of the provision of warranty performances. We reserve the right to charge the resulting costs should our customer services be required to deal with unjustified warranty claims. In the event of defects, please contact the vendor of the appliance or the EFALOCK service partner in your country.

# MICRO SCALE

### GUARANTEE

In case of claims and necessary repairs, please fill out completely and attach this voucher.



Date of purchase

Signature

## MICRO SCALE

### ENGLISH

